 


CONTENTS:


- A. 2 Tear-off buttons
- B. 2 Flat Washers
- C. 2 Plastic plugs
- D. 2 Phillips screws



To install the tear-off post, remove the plug inserted in the hole for the post. Insert the tear-off post into the hole. On the interior of the shield, place the washer


in the counter bore area of the hole and screw in the self-tapping screw until the post is tight.

See Figure 1.

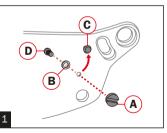

To stack tear-offs: Use a coin or screwdriver to turn the adjustable tear-off posts so that the widest part of the posts are towards the center of the face shield.


See Figure 2.

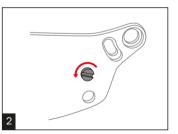

ADJUSTABLE TEAR-OFF POST KIT

Stack tear-offs to your preference. Rotate the adjustable tear-off posts until the tear-offs are tight.

See Figure 3.

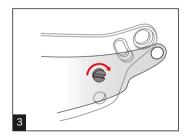

www.bellracing.com