
SERIOUS HEAD PROTECTION

HELMETS WITH M6 TERMINALS

⚠ IMPORTANT.

Read this notice before placing the HANS ANCHORS on your helmet!

Remove and discard the packing washer. Place the Hans anchor on the helmet following the illustration for the correct orientation. Screw clockwise with a hexagonal 4 mm or %2 in wrench tightening with a torque of 3.4 Newton Meters, 30 Inch Pounds or 1/4 turn beyond snug. Our screws are coated with thread lock.

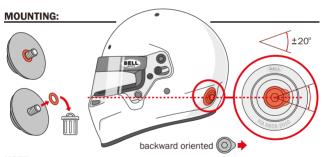

NOTE

These Hans anchors are suitable for helmets with M6 terminals in the shell according to the following approvals: FIA 8858-2010, FIA 8860-2010, FIA 8859-2015 and FIA 8860-2018. include Snell SA2015, Snell SA2020, SFI 24.1 Youth. Confirm this anchor is compatible with your head and neck restraint device before installing.